


■ FLOOR UNDER COVER REMOVAL/INSTALLATION

id091600820200

id091600820200

Floor under cover No.1 (LH)

- 1.Lift up the vehicle.
- 2.Remove the bolts.

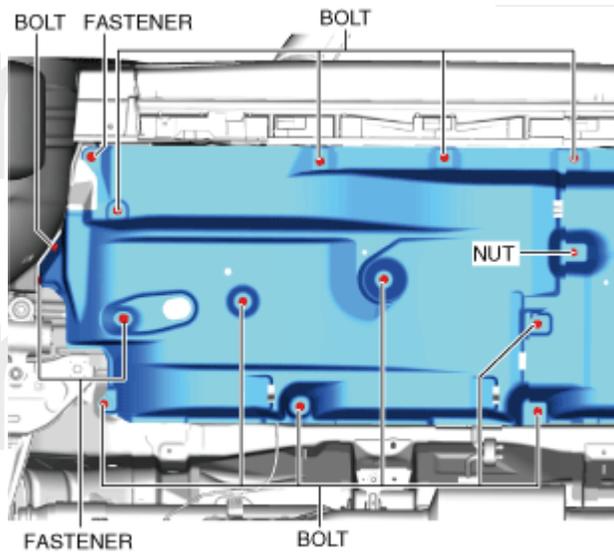


NUT : 8—10 N·m (82—101 kgf·cm, 71—88 in·lbf)
BOLT : 8—10 N·m (82—101 kgf·cm, 71—88 in·lbf)

ac5uuw00008001

- 3.Remove the fasteners.
- 4.Remove the nuts.
- 5.Remove the floor under cover No.1 (LH).
- 6.Install in the reverse order of removal.

Floor under cover No.1 (RH)

- 1.Lift up the vehicle.
- 2.Remove the bolts.

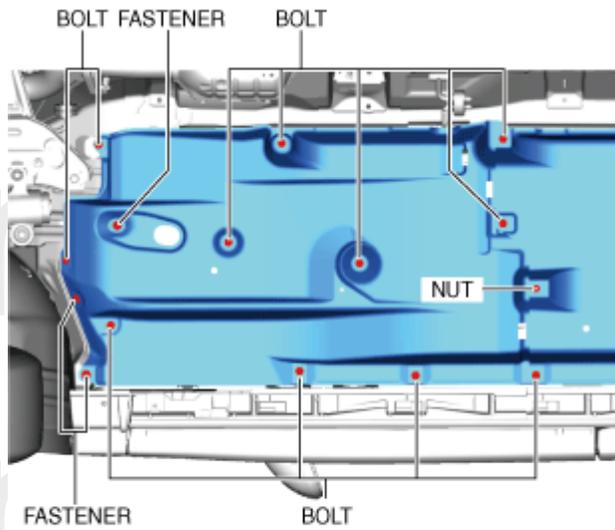


BOLT : 8—10 N·m (82—101 kgf·cm, 71—88 in·lbf)
NUT : 8—10 N·m (82—101 kgf·cm, 71—88 in·lbf)

ac5uuw00007261

3. Remove the fasteners.
4. Remove the nuts.
5. Remove the floor under cover No.1 (RH).
6. Install in the reverse order of removal.

Floor under cover No.2 (LH)

1. Lift up the vehicle.
2. Remove the bolts.

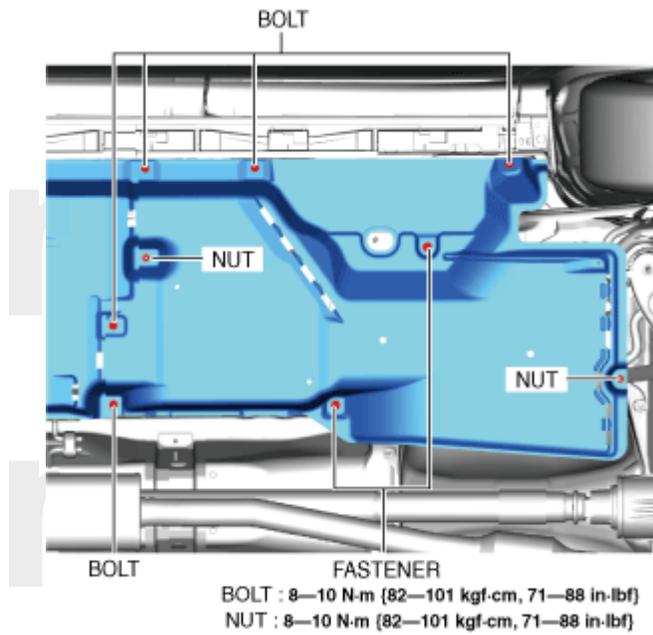


ac5uuw00007262

3. Remove the fasteners.
4. Remove the nuts.
5. Remove the floor under cover No.2 (LH).
6. Install in the reverse order of removal.

Floor under cover No.2 (RH)

1. Lift up the vehicle.
2. Remove the bolts.

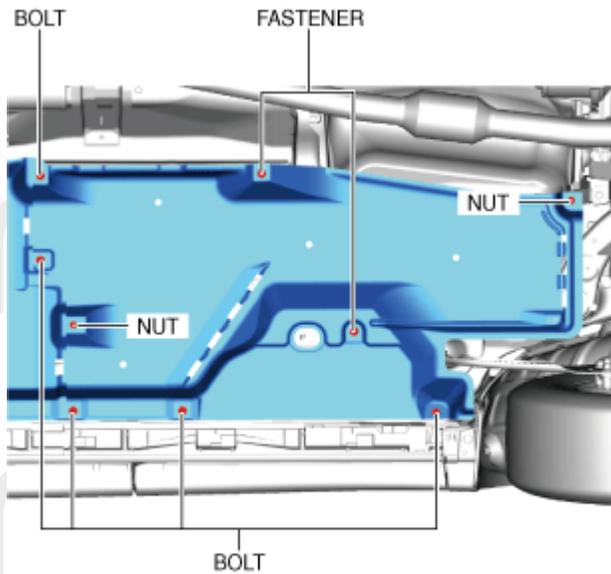

BOLT : 8—10 N·m (82—101 kgf·cm, 71—88 in·lbf)

NUT : 8—10 N·m (82—101 kgf·cm, 71—88 in·lbf)

ac5uuw00007263

- 3.Remove the fasteners.
- 4.Remove the nuts.
- 5.Remove the floor under cover No.2 (RH).
- 6.Install in the reverse order of removal.