
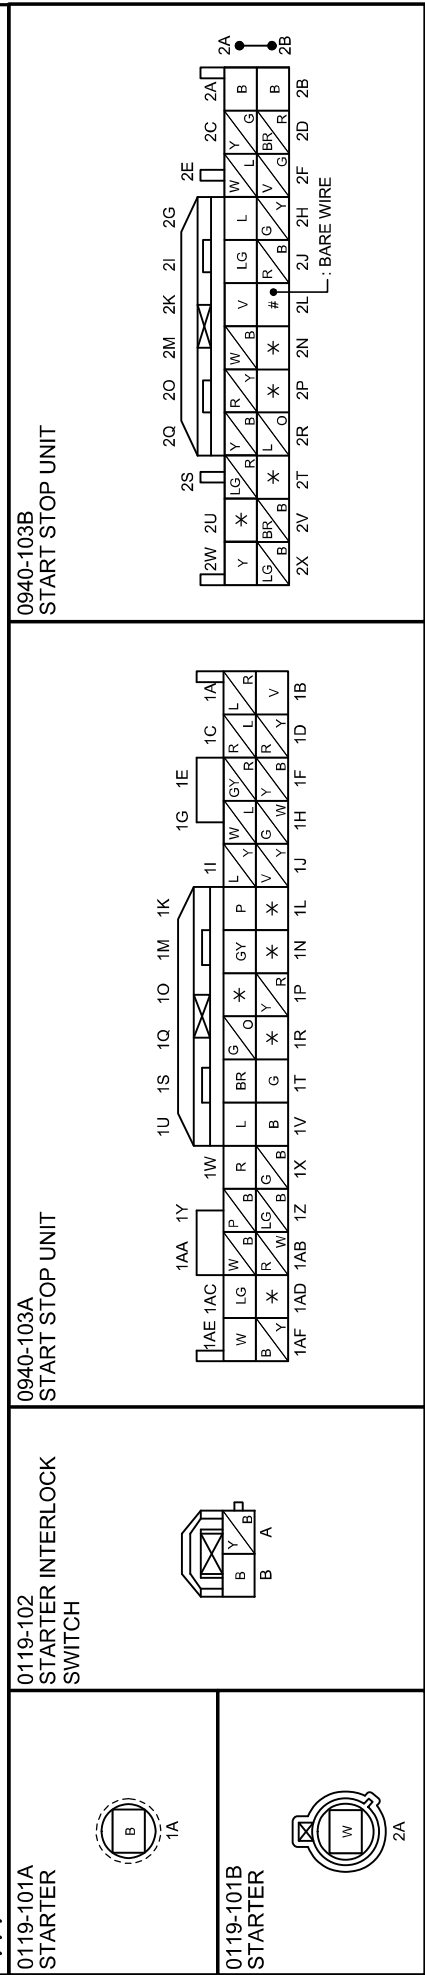


# STARTING SYSTEM (SKYACTIV-G 2.0, SKYACTIV-D 2.2)

0119-1

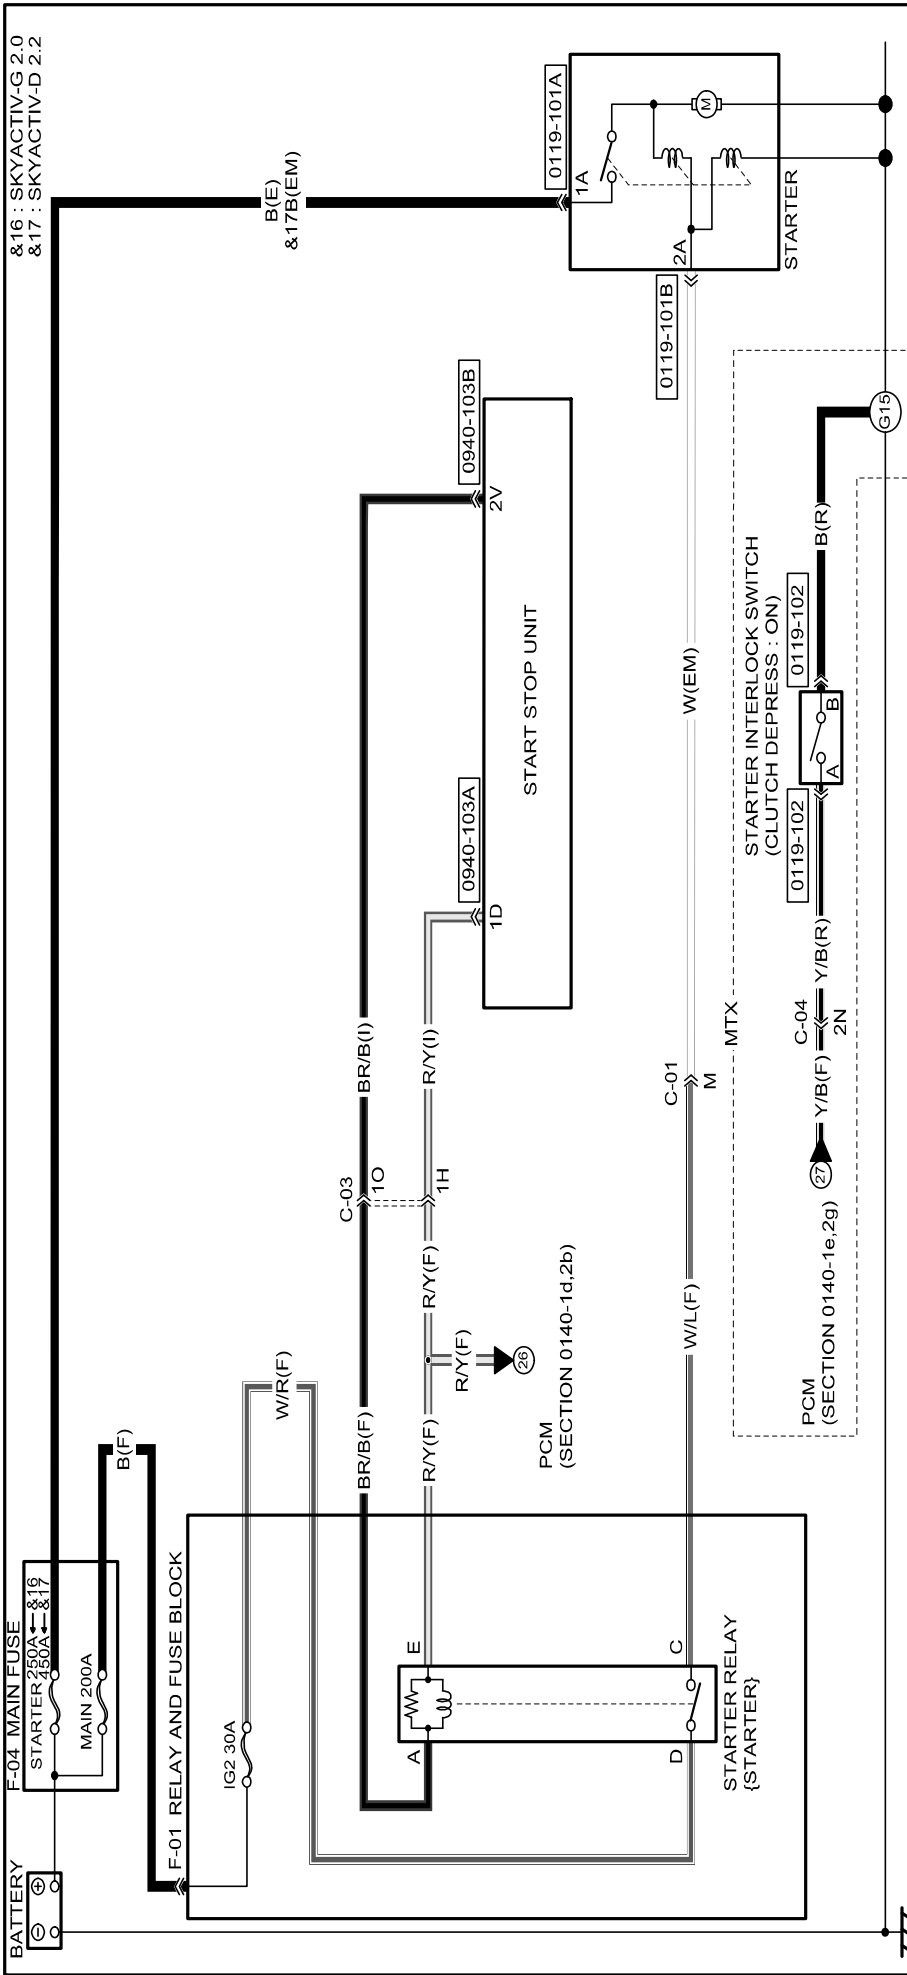

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.