

Bluetooth® UNIT REMOVAL/INSTALLATION

Caution

- The audio unit determines the presence/non-presence of a Bluetooth® unit and records it based on the communication status when the ignition is switched ON (engine off or on) or to the ACC position for the first time after the negative battery terminal is connected.
- If the negative battery terminal is connected while the audio unit has recorded the non-presence of the Bluetooth® unit and thereafter a Bluetooth® unit is installed, the installed Bluetooth® unit will not operate.
- When installing or removing the Bluetooth® unit, always disconnect the negative battery terminal, and after the servicing is completed, switch the ignition to ACC or ON (engine off or on) to allow the audio unit to record the presence/non-presence of the Bluetooth® unit.

Note


- The Bluetooth® pairing information recorded in the Bluetooth® unit cannot be written to a new Bluetooth® unit. Therefore, the Bluetooth® pairing information will be eliminated if the Bluetooth® unit is replaced. Before replacing the Bluetooth® unit, explain to the customer that the Bluetooth® pairing resetting is required.

1. Disconnect the negative battery terminal.)

2. Remove the following parts:

- (1) Passenger-side front scuff plate
- (2) Passenger-side front side trim
- (3) Glove compartment
- (4) Dashboard under cover

3. Remove the bolts.

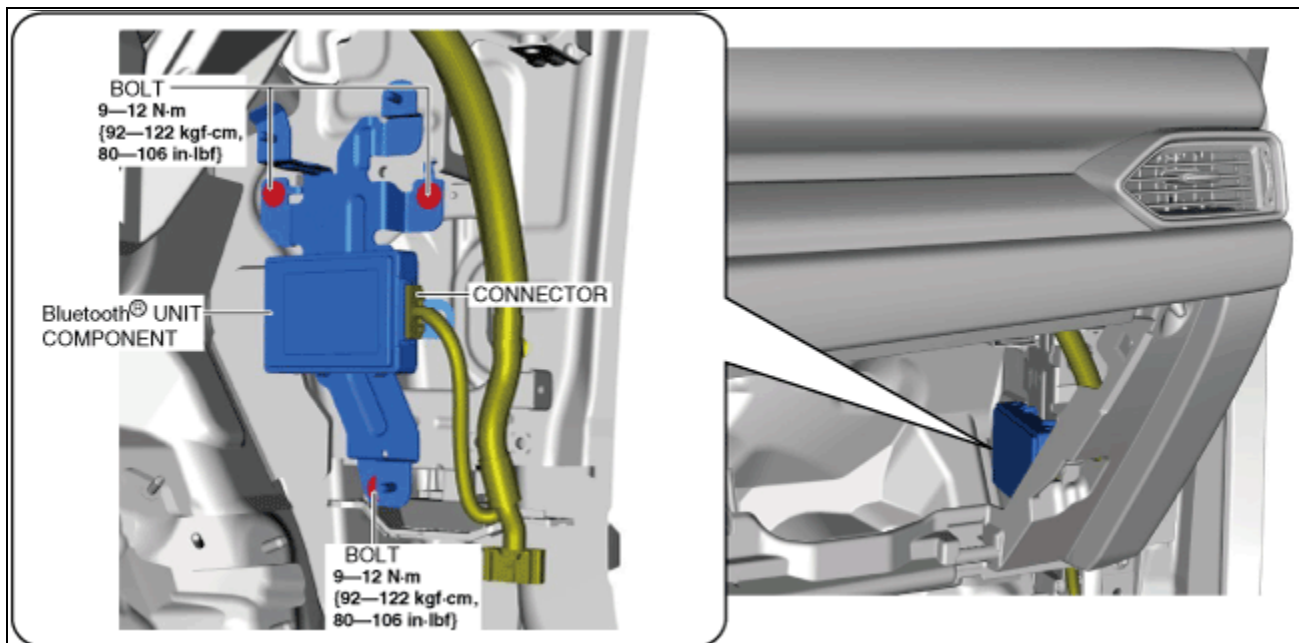


ac5uuw00005770

4. Disconnect the connector.

5. Remove the Bluetooth® unit component.

6. Remove the screws.

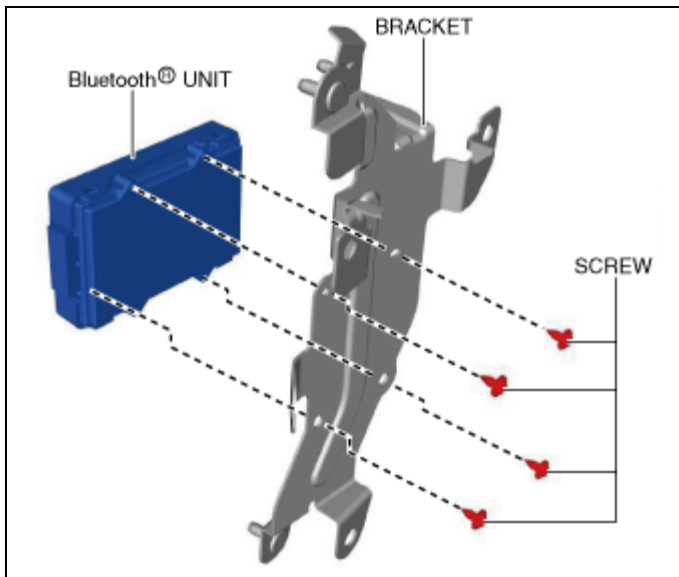

ac5uuw00005535

7. Remove the Bluetooth® unit.
8. Install in the reverse order of removal.