


## GLOVE COMPARTMENT REMOVAL/INSTALLATION

id091700800700

1. Pull the stay damper in the direction of the arrow shown in the figure and remove the hook.

### Caution

- If the glove compartment is closed without being joined to the stay damper, the stay damper may be damaged. Verify that the stay damper is joined to the glove compartment before closing the glove compartment.





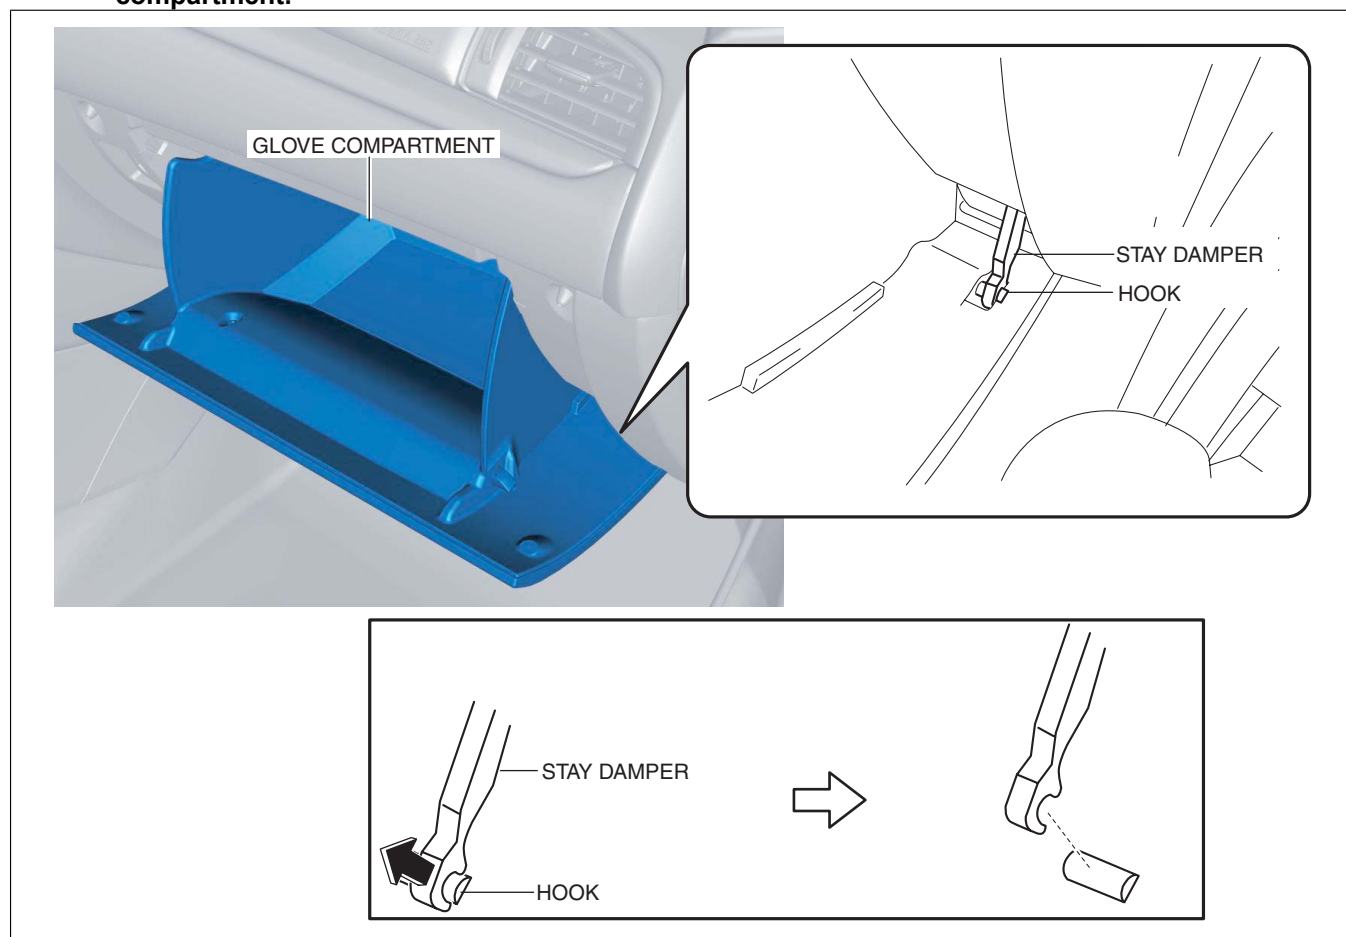


am6xuw00007496

2. Push the glove compartment end in the direction of the arrow and remove hooks.


### Caution

- When disengaging hooks, the hooks could interfere with the lower panel and cause scratches or damage. When removing hooks, press in the ends of the glove compartment to a location which does not interfere with the lower panel.

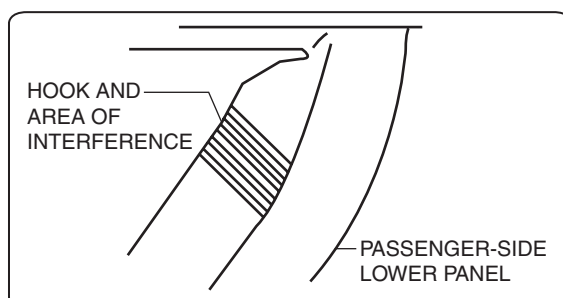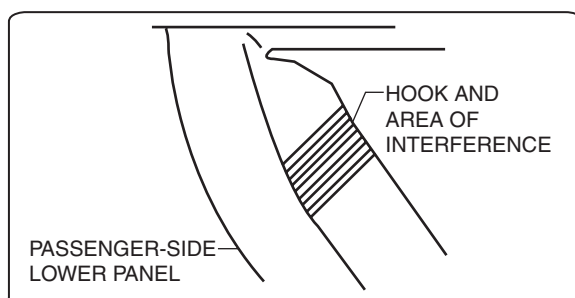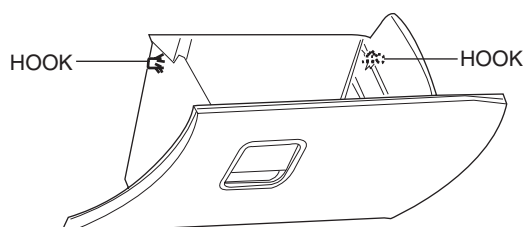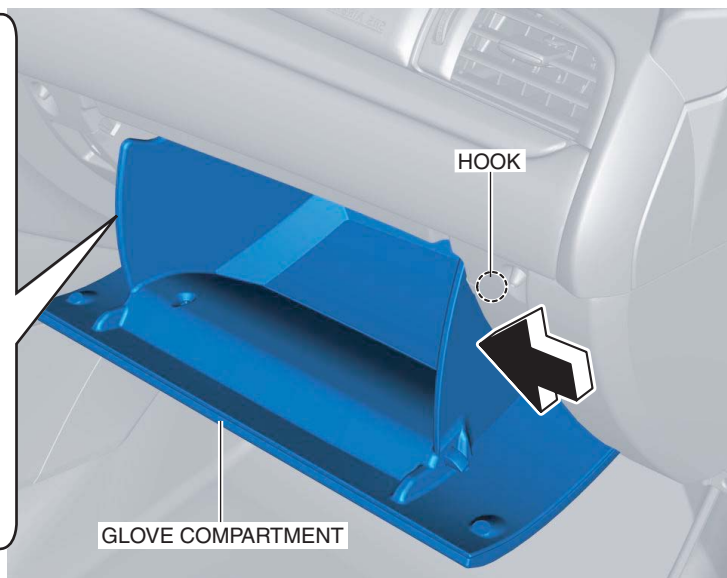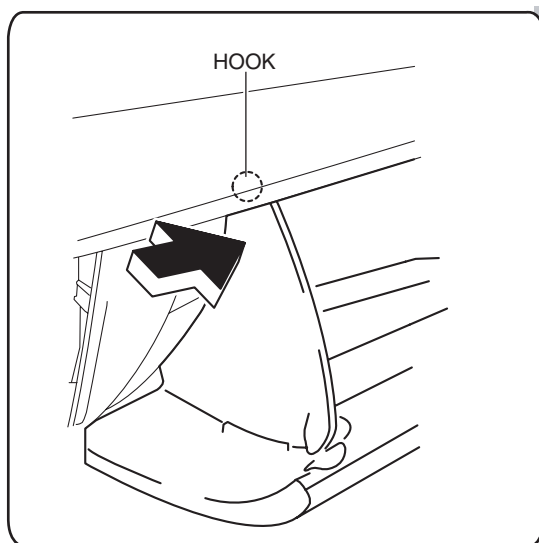

am6xuw00007497

3. Pull down the glove compartment in the direction of the arrow (1).

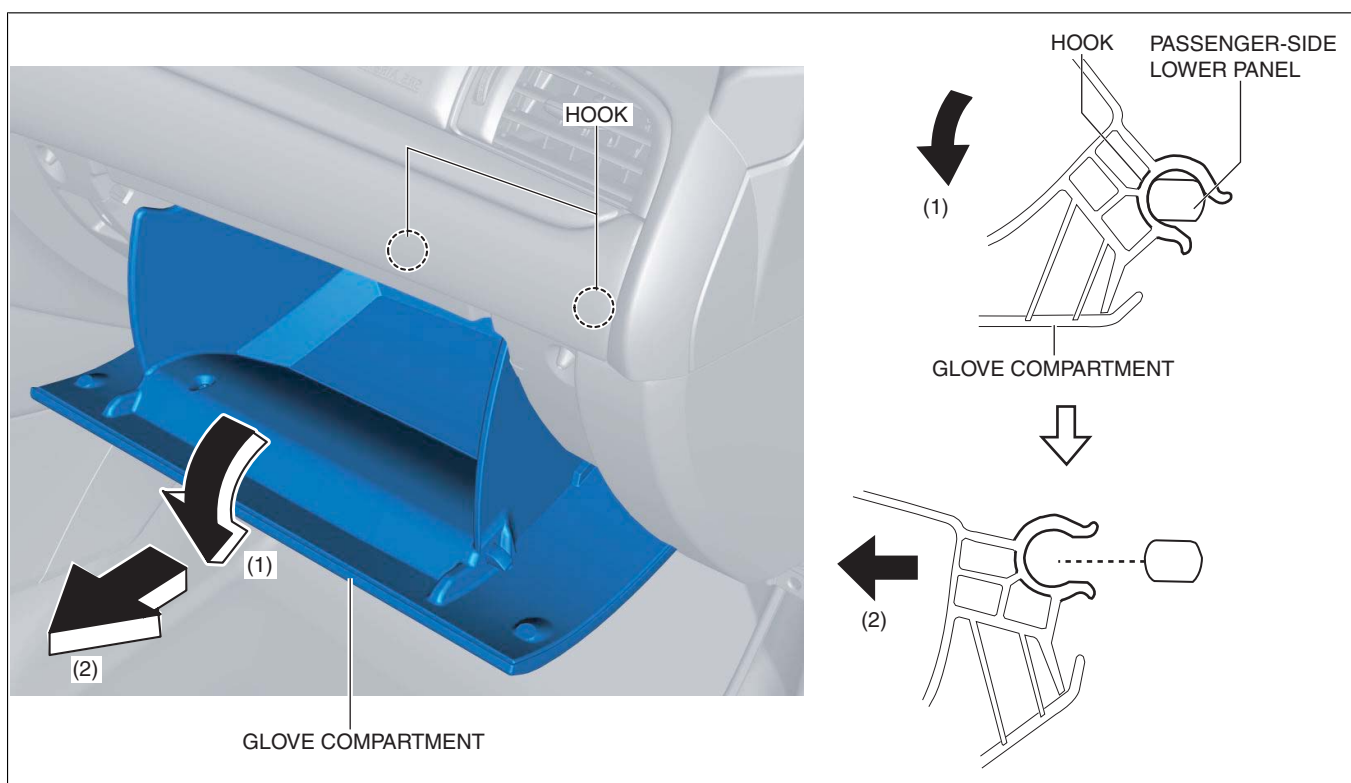

am6zzw00013273

4. Pull the glove compartment in the direction of the arrow (2) and remove it while detaching hooks.
5. Install in the reverse order of removal.