

[Previous](#) [Next](#) >

2013 - CX-5 - Body and Accessories


FRONT SASH MOLDING REMOVAL

WARNING:


- Using a utility knife with bare hands can cause injury. Always wear gloves when using a utility knife.
1. Using a utility knife, carefully remove the double-sided adhesive tape in the locations shown below.

CAUTION:


- When removing the double-sided adhesive tape, be careful not to damage clip A.

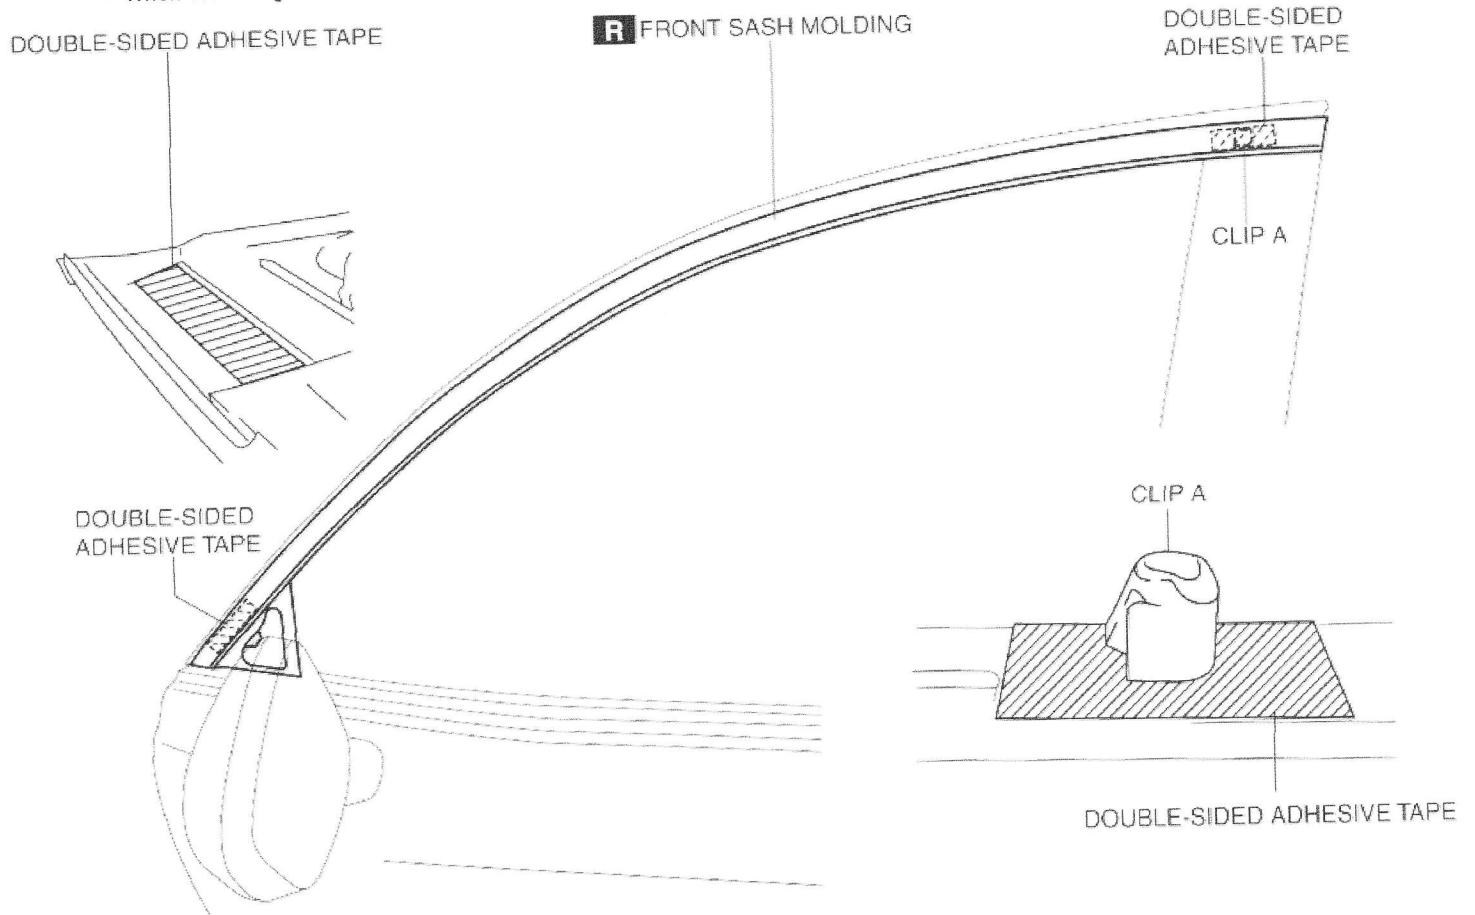

2. Insert a tape-wrapped flathead screwdriver shown in the figure and remove the protector in the direction of arrow (1).

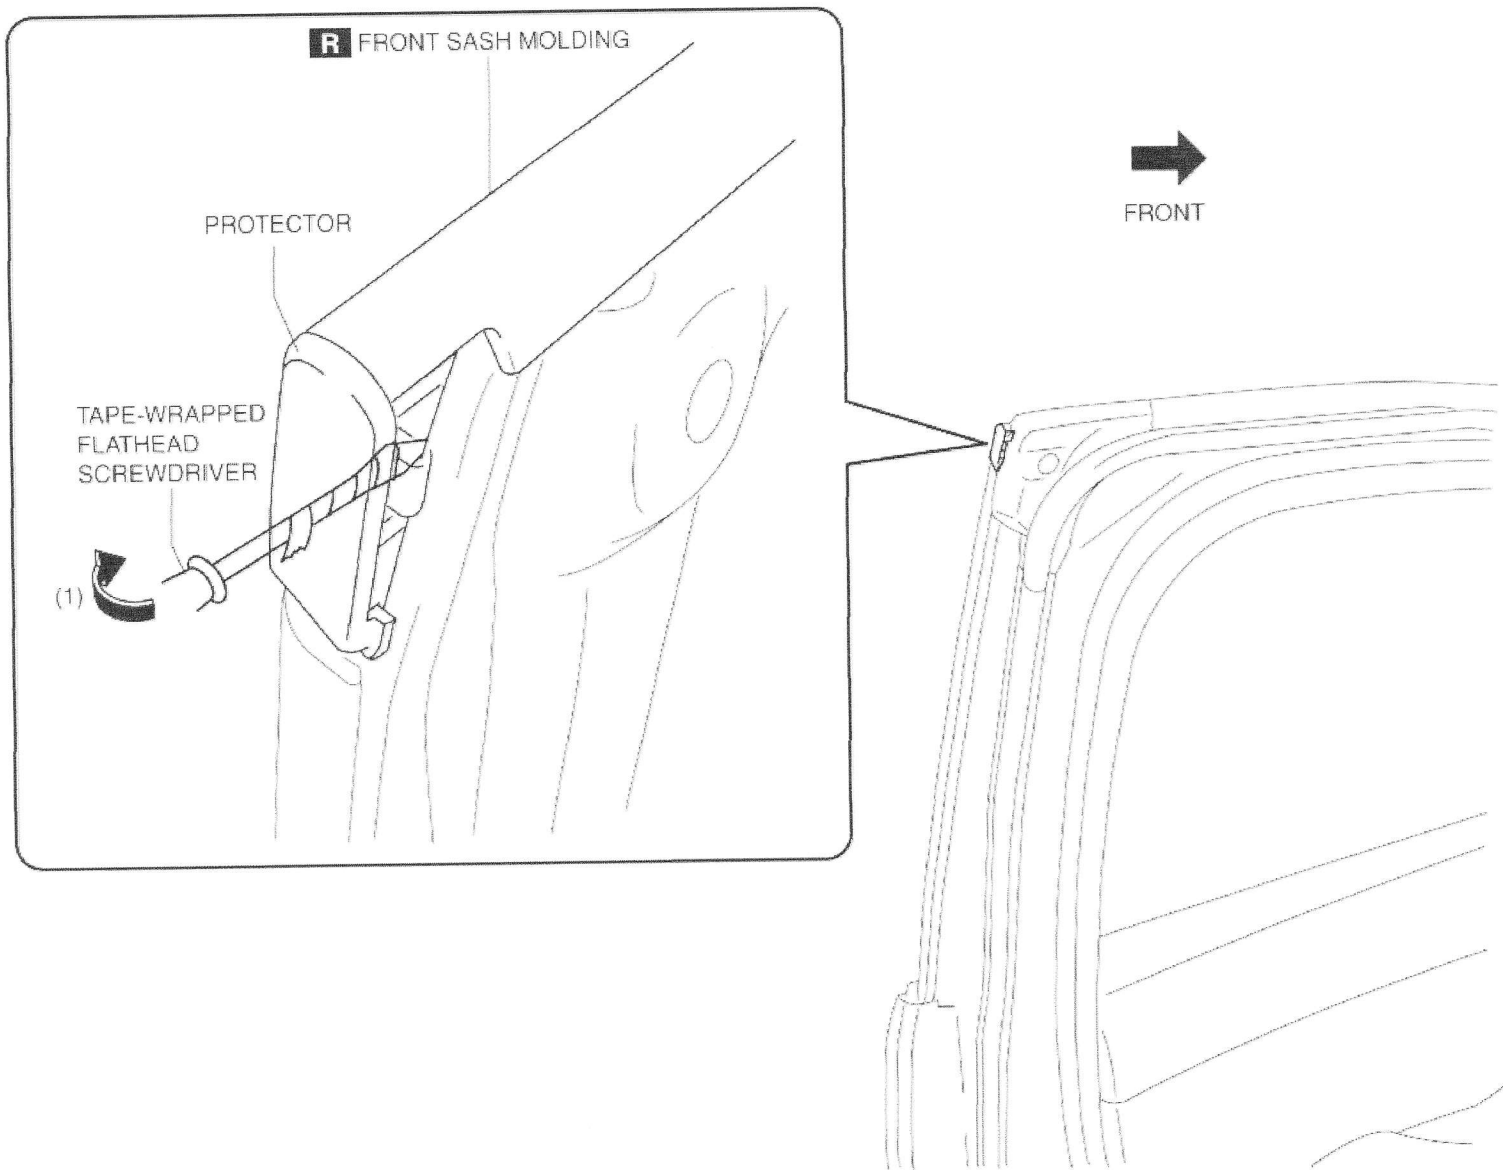

3. Insert a tape-wrapped flathead screwdriver shown in the figure and remove clip A in the direction of arrow (2).

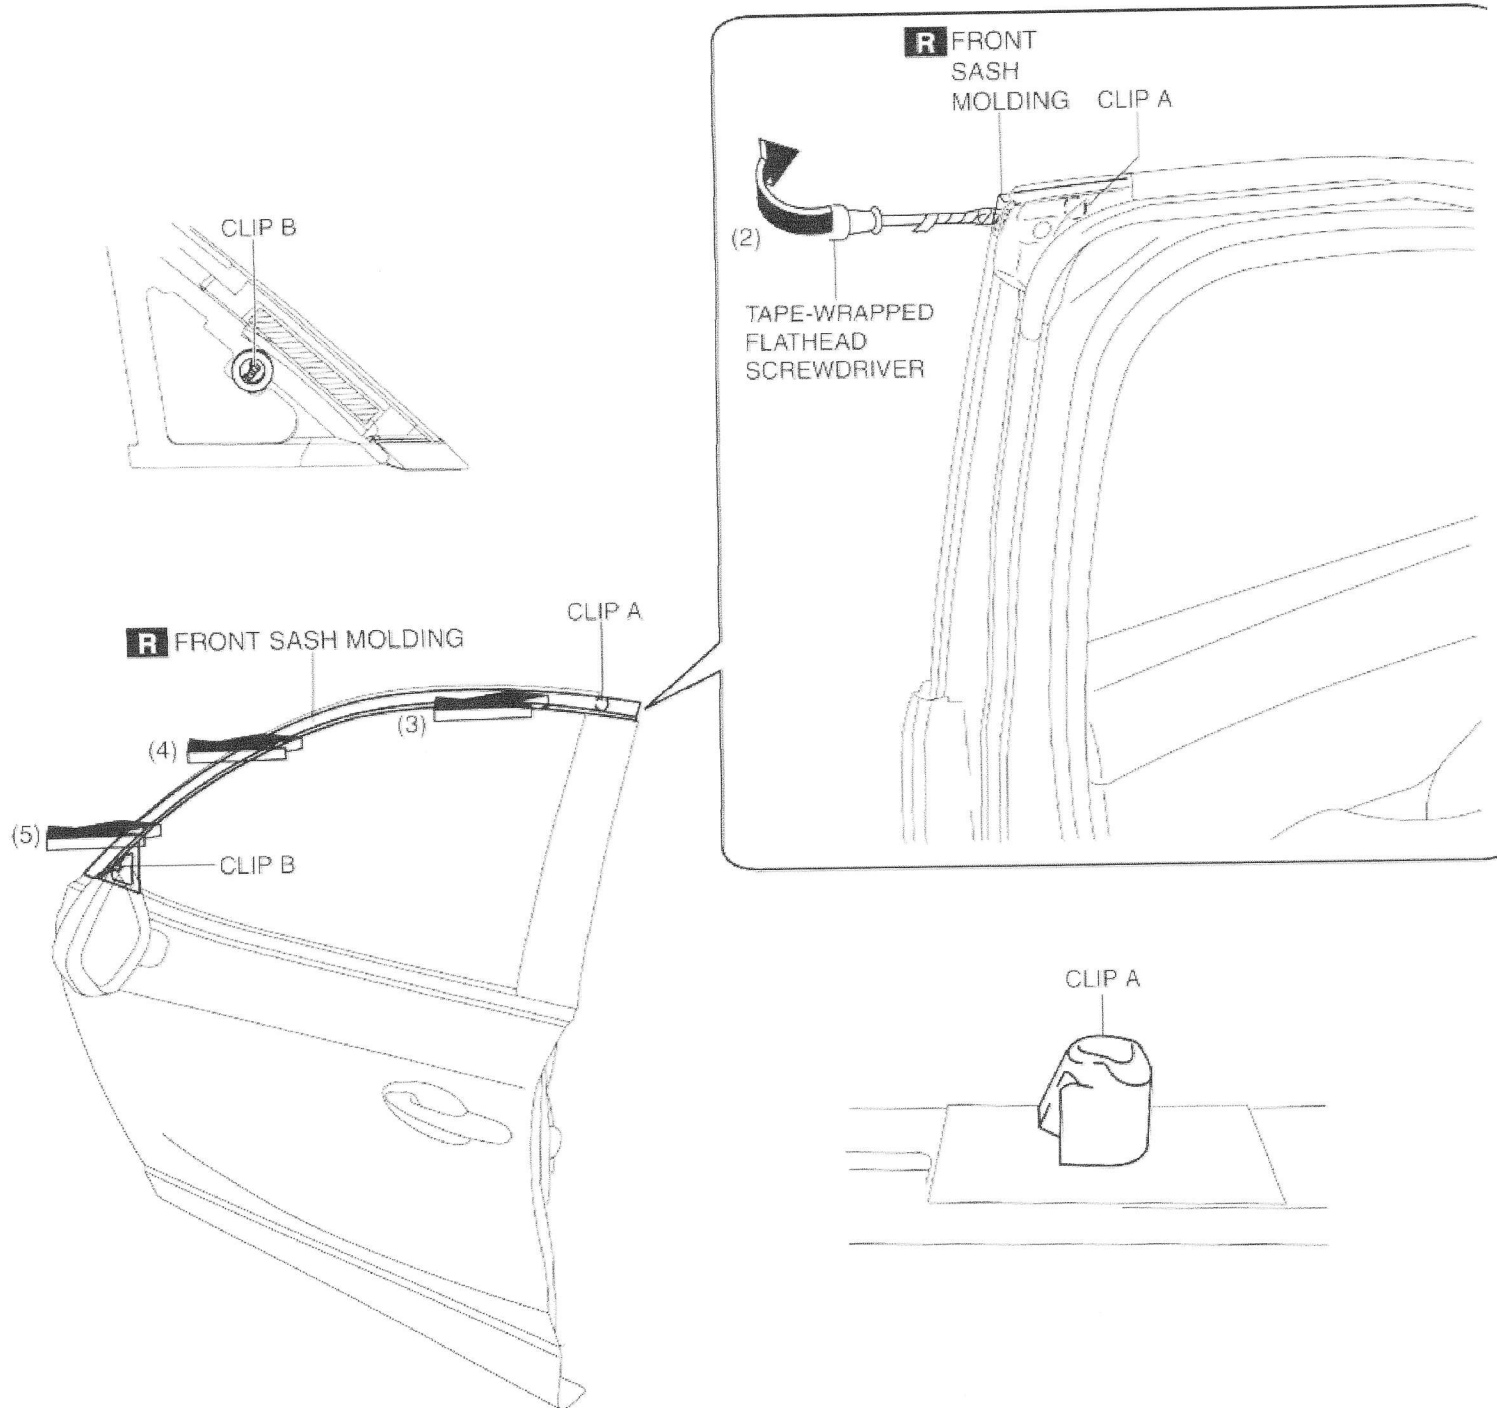

- 4. Remove the front sash molding in the direction of arrow in the order of (3), (4), (5) while detaching clip B.
- 5. Install in the reverse order of removal.

[: Previous](#) [Next >](#)

1013 - CX-5 - Body and Accessories


FRONT SASH MOLDING INSTALLATION

WARNING:

- Using a utility knife with bare hands can cause injury. Always wear gloves when using a utility knife.



NOTE:

- Double-sided adhesive tape has already been attached to the new front sash molding.
1. When installing a new front sash molding, follow the procedure below:
 - a. Carefully remove the adhesive remaining on the body using a razor blade.
 - b. Remove any grease or dirt from the adhesion surface of the body.
 2. Remove the adhesive remaining on the front sash molding and the body using a razor blade.
 - a. Remove any grease or dirt from the adhesion surface of the front sash molding and the body.
 - b. Apply primer to the bonding area of the front sash molding.
 - c. Affix double-sided adhesive tape to the front sash molding as shown in the figure.

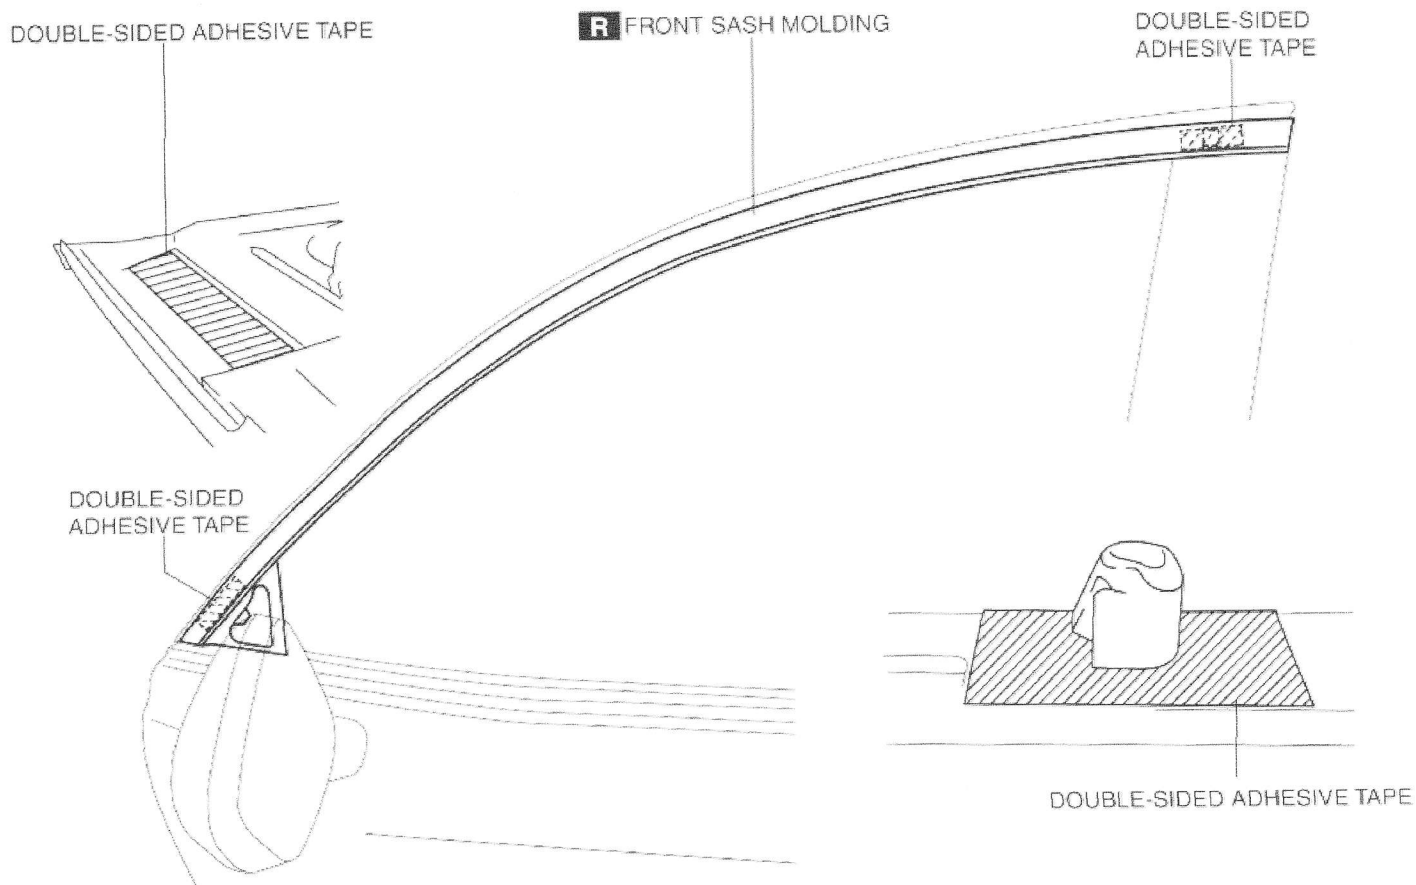


NOTE:


- As for the double-sided adhesive tape, use 3M GT7120 or equivalent.
3. Peel off the backing of the double-sided adhesive tape.
 4. Hook tab A to the body in the position where clip B aligns with the sash holes.

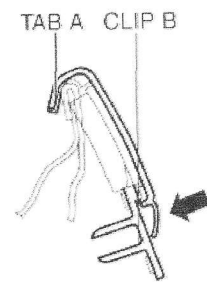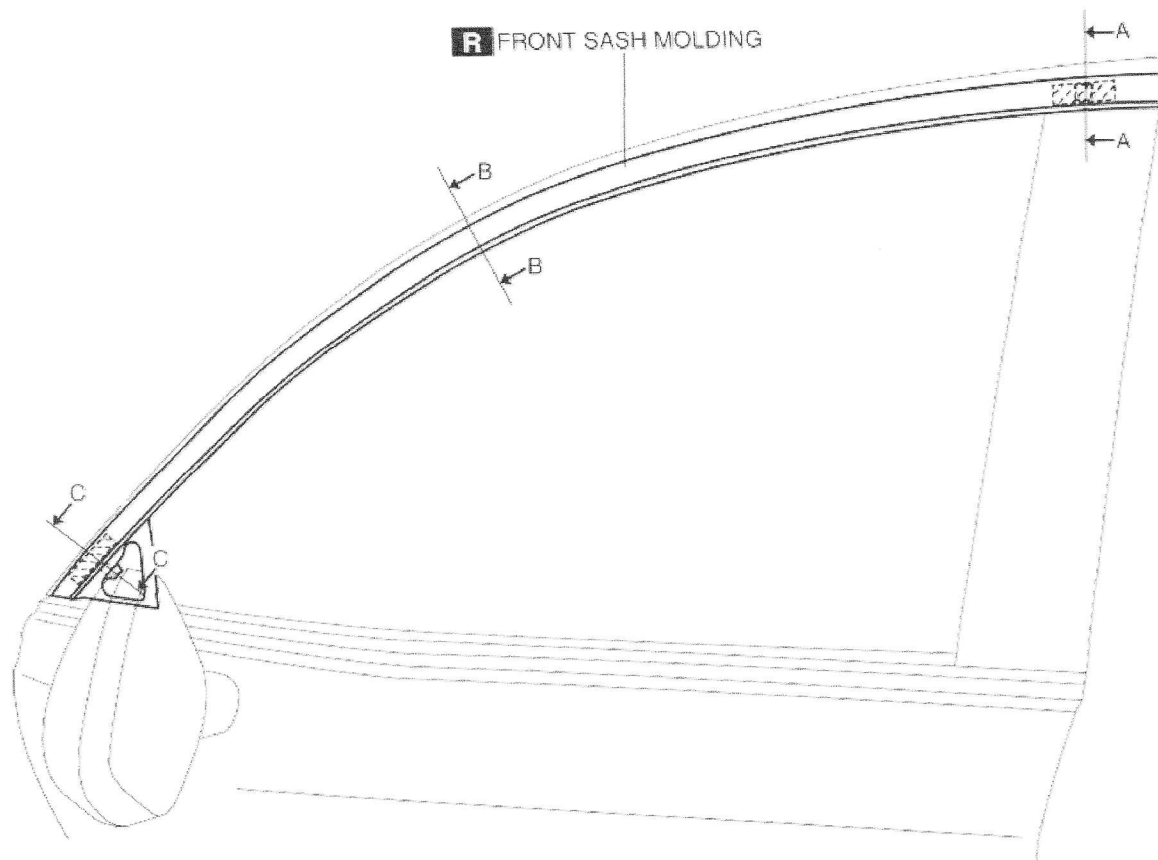

SEC. A—A

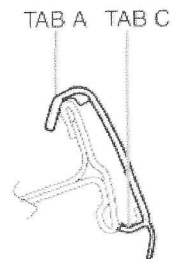

SEC. B—B

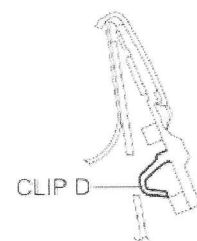

SEC. C—C

5. Press the front sash molding in the direction of the arrow and install clip B to the body.

CAUTION:

- Do not press the front sash molding in any place other than the rubber areas.

6. Press the front sash molding from the vehicle front in the direction of the arrow and install tab C.

7. Press the front sash molding in the direction of the arrow and install clip D to the body.

NOTE:

- After installing the front sash molding, verify that tabs A and C are connected properly to the body.